

Logistics Cold Chain Transport Cooler



HZY-40Z

Product Advantages

DC Frequency Conversion Technology

DC frequency conversion compressor, superior energy efficiency.

Tilt Protection Function

Electronic gyroscope in board, effective protection for compressors.

Integrated Main Body

Rotational molding body better adapted to complex transport environments.

Multiple Power Supply

Supports AC and DC power.

Qingdao Haier Biomedical Co.,Ltd.

No.280 Feng Yuan Road, High-tech Zone,
Qingdao, 266109, P.R. China
E-mail: inquiry@haierbiomedical.com
Website: www.haiermedical.com



Haier Biomedical
International



Haier Biomedical
International



@haiermedicalint



Haier Biomedical
International




Haier Biomedical
International


Active Cooling Transport Cooler

Scope of Application

Temperature Sensitive Medicines Transportation Flow

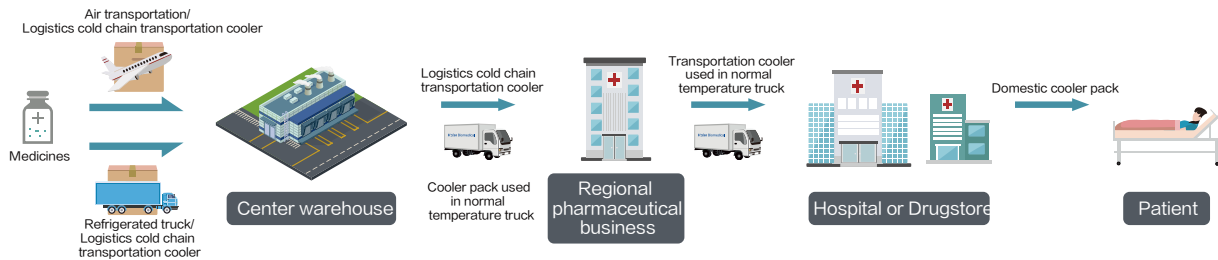

Vaccines Transportation Flow

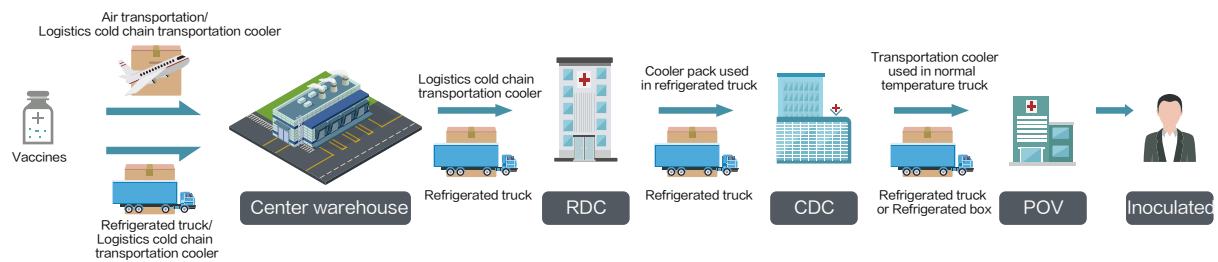

Unique Designs

- The body and door use integrated rotomolding.
- Using environmental LBA CFC-free foaming materials, thermal insulation performance is increased by up to 5%.
- The body is equipped with two handles for easy carry.
- Optional: Casters to facilitate transport.
- Optional: Electromagnetic lock, with password lock equipped; more secure.
- Forced air cooling method, the temperature is more uniform.
- Built-in UVC ultraviolet lamp for regular disinfection.
- 3 in 1 wide temperature range, multiple functions within one unit, greater cost savings.

Specifications

| Model | Exterior Dimensions (W*D*H) (mm) | Interior Dimensions (W*D*H) (mm) | Insulation | Cooling Type | Exterior/ Interior | Temperature Control | Net Weight (Kg) | Temperature Range (°C) | Power Supply/ Max Power | Power Consumption (kW.h/24h) |
|--|-----------------------------------|----------------------------------|-----------------------------------|--------------|----------------------------|-----------------------------|-----------------|----------------------------------|---|------------------------------|
| HZY-40Z | 800*550*505 | 338*348*285 | CFC-Free foamed-in-place urethane | Compressor | HDPE | Microprocessor controlled | 42 | -20-22 | AC 110-240V 50/60HZ DC12/24V 90W | 1.5 |
| Alarm | Built-in Battery (for alarm only) | USB | Electromagnetic Lock | Light | UV Lamp | Made Date/ Software Version | Service Life | Anti-shock Safety Classification | | |
| High & low temperature alarm, sensor error alarm, power abnormal alarm, door ajar alarm, low battery alarm | 12V/7Ah | Y | Optional | 12V/1W | UVC 12V/2-4mW, 473nm-479nm | See barcode/V1 | 10 years | I | | |

PS: Technical information may vary from the appliance that you have just purchased due to technical improvements.